




Allen-Bradley

*1336 IMPACT™
Adjustable
Frequency
AC Drive
(Series A)*

BP300 – BP450

Troubleshooting Guide

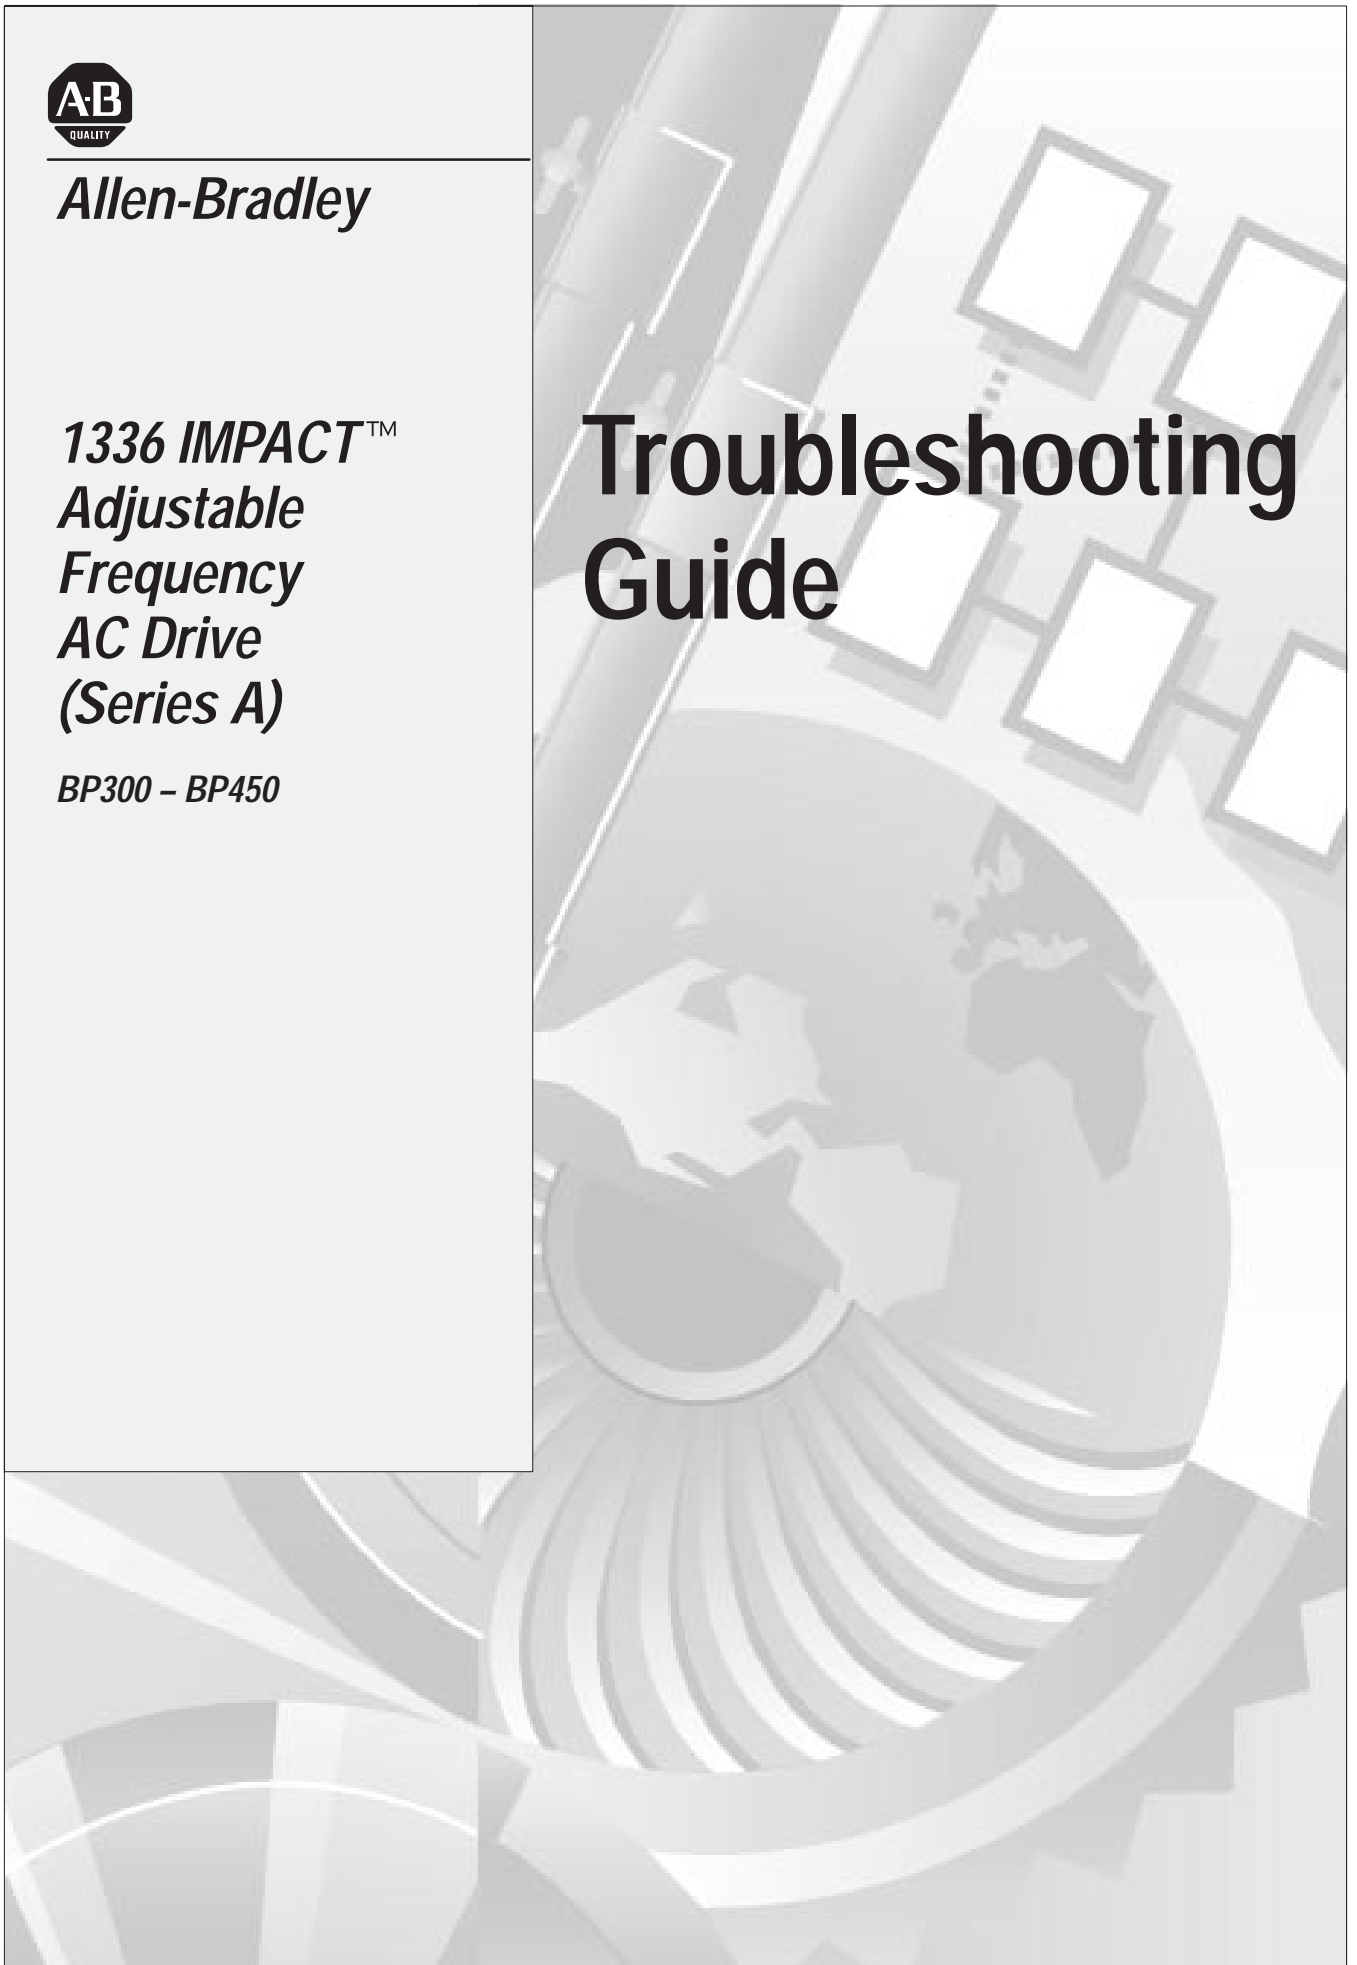

Important User Information

Because of the variety of uses for the products described in this publication, those responsible for the application and use of this control equipment must satisfy themselves that all necessary steps have been taken to assure that each application and use meets all performance and safety requirements, including any applicable laws, regulations, codes and standards.

The illustrations, charts, sample programs and layout examples shown in this guide are intended solely for purposes of example. Since there are many variables and requirements associated with any particular installation, Rockwell Automation does not assume responsibility or liability (to include intellectual property liability) for actual use based upon the examples shown in this publication.

Rockwell Automation publication SGI-1.1, *Safety Guidelines for the Application, Installation, and Maintenance of Solid-State Control* (available from your local Rockwell Automation office), describes some important differences between solid-state equipment and electromechanical devices that should be taken into consideration when applying products such as those described in this publication.

Reproduction of the contents of this copyrighted publication, in whole or in part, without written permission of Rockwell Automation, is prohibited.

Throughout this manual we use notes to make you aware of safety considerations:



ATTENTION: Identifies information about practices or circumstances that can lead to personal injury or death, property damage or economic loss.

Attention statements help you to:

- identify a hazard
- avoid the hazard
- recognize the consequences

Important: Identifies information that is critical for successful application and understanding of the product.



We Want Our Manuals to be the Best!

You can help! Our manuals must meet the needs of you, the user. This is your opportunity to make sure they do just that. By filling out this form you can help us provide the most useful, thorough, and accurate manuals available. Please take a few minutes to tell us what you think. Then mail or FAX this form.

FAX: to your local Allen-Bradley Sales Office or 414/512-8579.

PUBLICATION NAME _____

PUBLICATION NUMBER, DATE AND PART NUMBER (IF PRESENT) _____

✓ CHECK THE FUNCTION THAT MOST CLEARLY DESCRIBES YOUR JOB.

- SUGGEST / RESPONSIBLE FOR THE PURCHASE OF EQUIPMENT MAINTAIN / OPERATE PROGRAMMABLE MACHINERY
- DESIGN / IMPLEMENT ELECTRICAL SYSTEMS TRAIN/EDUCATE MACHINE USERS
- SUPERVISE FLOOR OPERATIONS

✓ WHAT LEVEL OF EXPERIENCE DO YOU HAVE WITH EACH OF THE FOLLOWING PRODUCTS?

	NONE	LITTLE	MODERATE	EXTENSIVE
PROGRAMMABLE CONTROL	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
AC / DC DRIVES	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PERSONAL COMPUTERS	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
NC / CNC CONTROLS	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
DATA COMMUNICATIONS / LAN	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

✓ RATE THE OVERALL QUALITY OF THIS MANUAL BY CIRCLING YOUR RESPONSE BELOW. (1) = POOR (5) = EXCELLENT

HELPFULNESS OF INDEX / TABLE OF CONTENTS		1	2	3	4	5					
CLARITY			1	2	3	4	5				
EASE OF USE				1	2	3	4	5			
ACCURACY AND COMPLETENESS					1	2	3	4	5		
QUALITY COMPARED TO OTHER COMPANIES' MANUALS						1	2	3	4	5	
QUALITY COMPARED TO OTHER ALLEN-BRADLEY MANUALS							1	2	3	4	5

- ✓ WHAT DID YOU LIKE MOST ABOUT THIS MANUAL?**
- ✓ WHAT DID YOU LIKE LEAST ABOUT THIS MANUAL?**
- ✓ PLEASE LIST ANY ERRORS YOU FOUND IN THIS MANUAL (REFERENCE PAGE, TABLE, OR FIGURE NUMBERS).**
- ✓ DO YOU HAVE ANY ADDITIONAL COMMENTS?**

✓ COMPLETE THE FOLLOWING.

NAME _____ COMPANY _____

TITLE _____ DEPARTMENT _____

STREET _____ CITY _____ STATE _____ ZIP _____

TELEPHONE _____ DATE _____

CUT ALONG DOTTED LINE

FOLD HERE

FOLD HERE



BUSINESS REPLY MAIL


FIRST CLASS PERMIT NO. 413 MEQUON, WI

POSTAGE WILL BE PAID BY ADDRESSEE

ALLEN-BRADLEY

Attn: Marketing Communications
P.O. Box 760
Mequon, WI 53092-9907

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

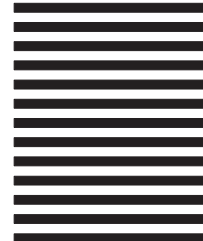

Summary of Changes

The information below summarizes the changes to the company-wide templates since the last release.

Updated Information

No changes have been made to this manual.

Table of Contents

Preface

Manual Objective	P-1
Who Should Use This Manual	P-1
Safety Precautions	P-1
Electrostatic Discharge Precautions	P-2
1336 IMPACT Product Identification	P-3
Drive Nameplate Location	P-3
Drive and Option Identification	P-4
1336 IMPACT Drive Catalog Numbers	P-4
Drive Rating Qualifications	P-6
Enclosure Type	P-6
Conventions	P-6
Auxiliary Interlock	P-6
Bit	P-6
Check	P-7
Connector	P-7
Default	P-7
Enable Input	P-7
False	P-7
Jumper	P-7
L Option Board	P-8
Not External Fault Input	P-8
Parameter	P-8
Press	P-8
True	P-8
Related Publications	P-9

Control Logic Wiring and Adapters

Chapter 1

Chapter Objectives	1-1
Chapter Overview	1-1
L Option Board	1-2
L Option Board Jumpers	1-3
Available Inputs	1-4
Local Programming	1-4
Human Interface Module (HIM)	1-9
Description	1-9
Removing the HIM	1-10
HIM Operation	1-12
Graphic Programming Terminal	1-12
GPT Description	1-12
DriveTools	1-13
Control Firmware Function	1-13

Troubleshooting and Error Codes

Chapter 2

Chapter Objectives	2-1
Fault/Warning Handling	2-1
Viewing the Fault and Warning Queues on the HIM	2-2
What Are the Fault Descriptions	2-4
Diagnostic Procedures by Symptom	2-14
Start Up Troubleshooting Procedures	2-18
Miscellaneous Troubleshooting Procedures	2-18
Encoderless Troubleshooting Procedures	2-20

Disassembly and Access Procedures

Chapter 3

Chapter Objectives	3-1
Disassembly and Access Overview	3-1
Electrostatic Discharge Precautions	3-1
Tools	3-2
Fastener Torque Specifications	3-2
Torque Sequence	3-2
Torque Specifications	3-3
Disassembly and Access Procedures	3-5
Removing the High Voltage Guard	3-5
Removal	3-6
Installation	3-6
Removing the L Option Board	3-7
Removal	3-7
Installation	3-8
Removing the Circuit Board Platform	3-9
Removal	3-9
Installation	3-11
Removing the Main Control Board Mounting Plate	3-12
Removal	3-12
Installation	3-13
Removing the Main Control Board	3-14
Removal	3-14
Installation	3-15
Removing the Gate Driver Board from the Mounting Plate	3-16
Removal	3-16
Installation	3-17
Removing the Precharge Board from the Mounting Plate	3-18
Removal	3-18
Installation	3-19
Removing a Power Module Snubber Board	3-20
Removal	3-20
Installation	3-22

	Removing an Input Rectifier Snubber Board	3-23
	Removal	3-23
	Installation	3-24
	Accessing Power Plane Components	3-24
Component Test Procedures	Chapter 4	
	Chapter Objectives	4-1
	Component Test Overview	4-1
	Electrostatic Discharge Precautions	4-2
	Tools	4-2
	Test 1 – Testing the Gate Driver Board	4-3
	Test 2 – Testing the Precharge Board	4-6
	Test 3 – Testing the Power Modules	4-8
	Test 4 – Testing the Bus Capacitors	4-12
	Test 5 – Testing the Input Rectifiers	4-15
Part Replacement Procedures	Chapter 5	
	Safety Precautions	5-1
	Electrostatic Discharge Precautions	5-1
	Tools	5-2
	Major Component Replacement	5-3
	Detailed Product Identification	5-4
	Bus Capacitor Bank	5-5
	Removal	5-5
	Installation	5-7
	Thermistor	5-9
	Removal	5-9
	Installation	5-10
	Power Modules	5-11
	Removal	5-11
	Installation	5-13
	Bus Fuses F1	5-14
	Removal	5-14
	Installation	5-15
	Input Fuses	5-16
	Removal	5-16
	Installation	5-17
	Ground Fault CT	5-18
	Removal	5-18
	Installation	5-20
	Input Rectifiers	5-21
	Removal	5-21
	Installation	5-22

LEMs	5-23
Removal	5-23
Installation	5-25
MOV Surge Suppressor	5-26
Removal	5-26
Installation	5-27
Fan and Transformer Assembly	5-28
Removal	5-28
Installation	5-30
DC Bus Inductor L1	5-31
Removal	5-31
Installation	5-33

Replacement Parts List

Chapter 6

Chapter Objectives	6-1
Ordering Replacement Parts	6-1
Replacement Parts Listing	6-2

Schematics — 20 – 60 HP 1336 IMPACT Drives

Chapter 7

Index

Preface

Manual Objective

The information in this manual is designed to help troubleshoot or repair an Allen-Bradley 1336 IMPACT Adjustable Frequency AC Drive with ratings BP250 – BP450.

Who Should Use This Manual

This manual is intended for qualified service personnel responsible for troubleshooting and repairing the 1336 IMPACT Adjustable Frequency AC Drive. You should:

- Read this entire manual before performing maintenance or repairs to drives.
- Have previous experience with, and basic understanding of, electrical terminology, procedures, required troubleshooting equipment, equipment protection procedures and methods, and safety precautions.

This manual describes equipment, troubleshooting, and disassembly procedures. You begin with general illustrations and end with greater detail concerning replacement parts and part locations on the drives. Later chapters may refer you back to earlier chapters for information on basic equipment and steps necessary to perform detailed diagnostics and part replacement.

Safety Precautions



ATTENTION: Some printed circuit boards and drive components may contain hazardous voltage levels. Remove and lock out power before you disconnect or reconnect wires and before you remove or replace fuses and circuit boards. Verify bus voltage by measuring the voltage between the +DC/-DC brake terminals. Do not attempt to service the drive until the bus voltage has discharged to zero volts.



ATTENTION: Potentially fatal voltages may result from improper usage of oscilloscope and other test equipment. The oscilloscope chassis may be at a potentially fatal voltage if not properly grounded. If an oscilloscope is used to measure high voltage waveforms, use only a dual channel oscilloscope in the differential mode with X 100 probes. It is recommended that the oscilloscope be used in the A minus B Quasi-differential mode with the oscilloscope chassis correctly grounded to an earth ground.



ATTENTION: Only personnel familiar with the 1336 IMPACT Adjustable Frequency AC Drive and associated machinery should plan or implement the installation, start-up and subsequent maintenance of the system. Failure to comply may result in personal injury and/or equipment damage.

Electrostatic Discharge Precautions



ATTENTION: This assembly contains parts and sub-assemblies that are sensitive to electrostatic discharge. Static control precautions are required when servicing this assembly. Component damage may result if you ignore electrostatic discharge control procedures. If you are not familiar with static control procedures, reference Rockwell Automation Publication 8000-4.5.2, Guarding Against Electrostatic Damage, or any other applicable ESD protection handbook.

Electrostatic discharge generated by static electricity can damage the complementary metallic oxide semiconductor devices on various drive boards. It is recommended that you perform these procedures to guard against this type of damage when circuit boards are removed or installed:

- Wear a wrist-type grounding strap that is grounded to the drive chassis.
- Attach the wrist strap before removing the new circuit board from the conductive packet.
- Remove boards from the drive and immediately insert them into their conductive packets.